

Canon EOS 1D Upgrade for MOVIEtube PR



Manual

Version 04-2010

info@kinomatik.com www.kinomatik.com



Step by step assembly instructions

1) Loosen the MOVIEtube PR rig camera table and remove the 4 screws from the camera table holder



2) Attach the bent camera table extension with 4 screws to the camera table holder




3) Attach the camera table to the camera table extension



info@kinomatik.com www.kinomatik.com



4) Unscrew the 19-mm MOVIEtube rod holder

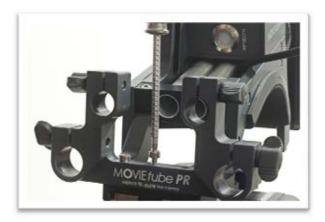

5) Attach the 1D upgrade to the Sony quick-release plate



6) Screw the 1D camera table support on the extended camera table top



info@kinomatik.com www.kinomatik.com



7) "Ready to shoot" with all larger DSLR cameras, for example Canon 1D Mark4

Remark:

The table support for a normal camera table can now be used as a lens support if required. Important: tighten the red screw on the camera table support properly by hand, so that the table is fastened at the three-points in a stable manner.



8) Scope of delivery

2x 19mm Alu Rods, Camtable extension, 19mm Camtable Support incl. ¼ screw 19mm Rod Holder, 3 screws 19/15mm MOVIEtube Rod Holders 4 screws camtable extension 4 screws Camtable (Sparepart)



9) required Tools

A metric hexagon key set is required for assembly of the 1D upgrade kit (SW 3mm and SW 2.5mm (not included in the kit).



